 




**1st** CALL  
COM Ltd



# AUB 300

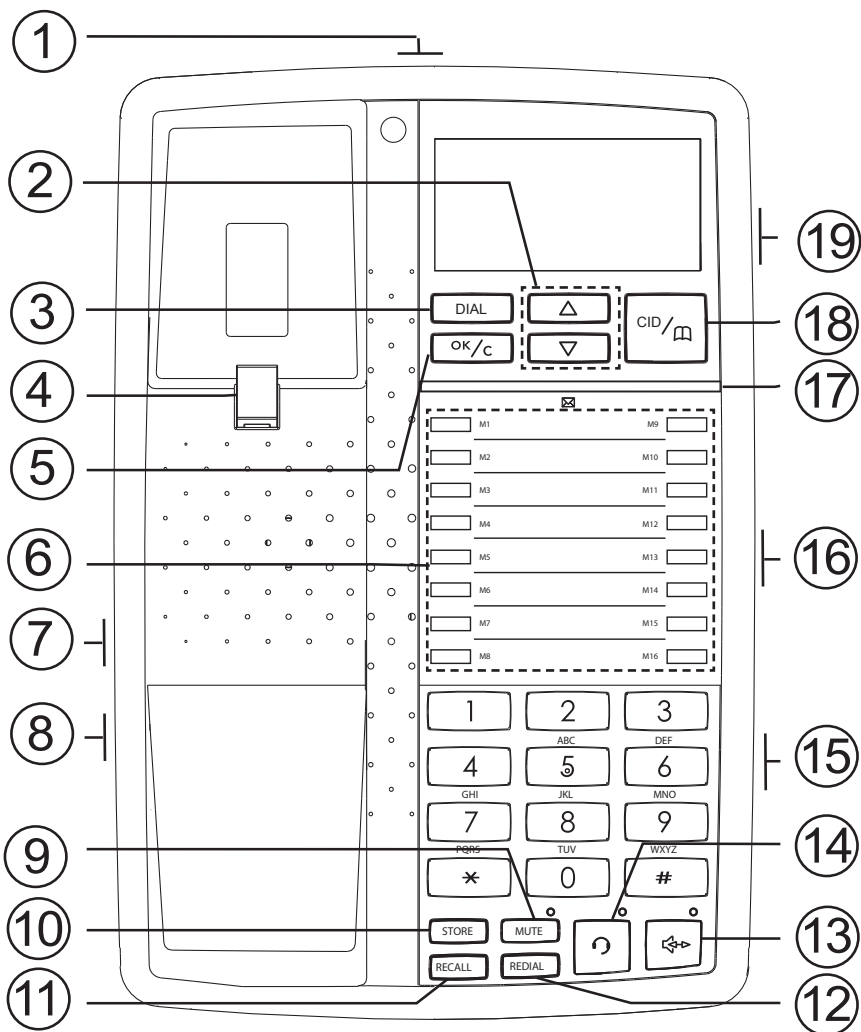



## English

- |    |                           |    |                                       |
|----|---------------------------|----|---------------------------------------|
| 1  | Line- and power-connector | 11 | Recall button                         |
| 2  | Scroll UP/DOWN buttons    | 12 | Redial button                         |
| 3  | Dial displayed number     | 13 | Hands free button and LED             |
| 4  | Wall mounting hanger hook | 14 | Headset button and LED                |
| 5  | Clear/OK button           | 15 | Speaker volume control                |
| 6  | One-Touch memories        | 16 | Handset/Headset volume control        |
| 7  | Headset socket            | 17 | Ringer/Message waiting indicator      |
| 8  | Handset socket            | 18 | Caller ID/Phone book                  |
| 9  | Mute button and LED       | 19 | Input socket for additional equipment |
| 10 | Store button              |    |                                       |


*Important!*

*The earpiece of the handset may attract small ferromagnetic objects such as staples and pins, care should be taken when placing the handset near these items.*

## Connection/Initial programming

1. Connect the curly cord to the handset and to the socket marked  on the side of the telephone.
2. Place the handset into the cradle.
3. If supplied, connect the mains adapter to the DC 9V socket on the telephone and to the mains power wall socket. If a power adapter is not used then batteries must be fitted! See “Batteries” section.
4. The display will now flash the alarm setting.
5. If the alarm is not shown press and hold  $\Delta$  until the alarm setting flashes. (detailed description of the alarm can be found in chapter **Alarm settings**)
6. Press **OK**.
7. Select the required language using  $\Delta/\nabla$ . Press **OK**.
8. Select the desired contrast setting (3=normal) using  $\Delta/\nabla$ . Press **OK**.
9. Set the correct hour (00-23) using  $\Delta/\nabla$ . Press **OK**.
10. Set the correct minute/s using  $\Delta/\nabla$ . Press **OK**.
11. Set the correct day using  $\Delta/\nabla$ . Press **OK**.
12. Set the correct month using  $\Delta/\nabla$ . Press **OK**.
13. Select the required pause setting (2 seconds=normal) using  $\Delta/\nabla$ . Press **OK**.
14. Please refer to **Batteries** above regarding the installation of back up batteries.
15. Connect the telephone line cord to the socket marked  on the telephone, and to a telephone network wall socket.
16. Lift the handset and listen for the dial tone. Your telephone is now operational.

## Batteries

The telephone requires 3 x AA 1.5V alkaline batteries. When the batteries are running low,  will be displayed.

The batteries will maintain the telephones functions and prevent the loss of Caller ID, memories and other functions in the event of a power failure.

1. Check that the mains adapter is correctly connected to avoid losing stored information.
2. Disconnect the telephone line cord from the network wall socket.
3. Remove the battery cover.
4. Install the batteries ensuring that the correct battery polarity is observed.
5. Replace the battery cover.

## Changing the clock, alarm settings, language or contrast

If you wish to alter the clock, alarm, language or contrast settings at a later point please refer to **Connection/Initial programming** (steps **5-13**) above.

## The display

In standby mode the date and time, number of new and total number of calls stored in the Caller ID memory will be displayed. Immediately following the connection of a call, a call timer will be shown on the display.

## Hearing aid compatible

This telephone is hearing aid compatible. Select the T mode on your hearing aid to enable this feature.

## Ringer

The ringer volume, melody and tone can be selected using the switches located on the underside of the telephone behind the battery cover:

## Labels/protective cover

The memory index cover can be accessed by carefully removing the transparent plastic using a small flat blade screwdriver or similar.

## Wall mounting

The telephone can be wall mounted using an optional wall mount bracket.

The wall mount bracket is available as an accessory, part number WB200/300 in white or black.



1. Fix the wall mount bracket on the back of the telephone.
2. Secure two screws, vertically positioned 83 mm apart.
3. The screws should locate into the two keyholes on the wall mount bracket.
4. Activate the hanging peg (located by the hook switch) by lifting it upwards and rotating it 180 degrees.

## Making a call



Lift the handset and dial the required telephone number.

### Pre-Dialling

You can enter and correct a telephone number before dialling.

1. Dial the required telephone number. Mistakes can be erased using **C**.
2. Press **DIAL** OR press   to dial the number.




### Redial

Repeatedly press **REDIAL** to view the last 5 numbers dialled. Press **DIAL** OR press   to dial the number.

## Volume control

The Handset/headset earpiece volume may be increased or decreased during a call.

Use  on the side of the phone to adjust the volume.

To adjust the speaker volume (hands free and group listening) use    on the side of the phone.

## Recall

Press the recall button **RECALL** followed by the extension number to transfer calls when connected to a PBX (TBR only). Access to additional network services can be gained by using the recall button **RECALL**, **✖** and **☒** keys. Contact your network operator for more information.

## Mute button

The handset/headset/hands free microphone can be disconnected during a call by pressing **MUTE**. Press **MUTE** once more to reactivate the microphone.

The **MUTE** LED will illuminate while the function is active.

## Hands free function

1. Press **↔**. The hands free function will be activated and the LED indicator next to the button will illuminate.
2. Dial the required telephone number. Adjust the volume using the volume control located on the side of the telephone.
3. Speak towards the microphone located on the front edge of the telephone.
4. Press **↔** to terminate the call.

If you wish, you can switch between handset and hands free mode by simply pressing **↔** or lifting the handset.

### *Please note!*

*Please remember that in hands free mode it is only possible for one person at a time to talk. The switch-over between speaker and microphone is automatic and dependent on the sound level of the incoming call and the microphone respectively. It is therefore essential that there are no loud noises, e.g. music, in the immediate vicinity of the telephone, as this will disrupt the hands free function.*

## Group listening

Group listening allows anyone in the same room as the base unit to hear both parties and follow the conversation through the base units speaker.

The ongoing call is not affected and can continue via the handset or optional headset.

1. Once the call has been connected, press **↔** to activate the Group Listening function. The LED indicator by the button will illuminate and the conversation can then be heard through the speaker.
2. To deactivate the Group Listening function, press **↔** again.

## Connection of a headset

An additional headset can be connected to the socket on the side of the telephone marked **📞**. To access an incoming call or dial press **📞**, to terminate a call press **📞** again. The LED next to the headset button will illuminate when activated.

### *Please note!*

*DORO original headsets are tested and adapted for this telephone. Other types and makes of headsets may be used, though the function and sound quality cannot be guaranteed. In the worst case, these could damage the headset and telephone. This type of damage is not covered by the telephone guarantee.*

## Phone book

The phone book will store 20 names (16 characters) and telephone (22 digits) numbers.

### Letters

Each number key is allocated certain letters, these do not follow the standard for all languages with some country-specific characters unavailable. The Phonebook is also arranged according to the order of the buttons. To insert a space press **1**, to erase press **C**.

### Storing names/numbers

1. Press **☰** repeatedly until the symbol **☰** is displayed. Press **STORE**.
2. Press **STORE** again.
3. Enter the telephone number to be stored (up to 22 digits). Mistakes can be erased by pressing **C**. Press **STORE**.
4. Enter name. Press the corresponding number key one or more times for the first letter. Press **STORE**.

*Please note!*

*If you need to insert a pause in the telephone number press **REDIAL**.*

*If you need to change a number, store the new number in the same location as the old one.*

### Dialling from the Phone book

1. Press **☰** repeatedly until the symbol **☰** is displayed.
2. Scroll through the entries using **△/▽**. To perform a quick-search press the corresponding number button one or more times for the first letter.
3. Press **DIAL** to dial the displayed number, or just wait to return to standby mode.



### Changing phone numbers/names

1. Press **☰** repeatedly until the symbol **☰** is displayed.
2. Scroll through the entries using **△/▽**. To perform a quick-search press the corresponding number button one or more times for the first letter.
3. Press and hold **STORE** until the display shows EDIT ? Press **STORE**.
4. Correct the number using **C** and **△/▽**. Press **STORE**.
5. Correct the name using **△/▽**. Press **STORE** to confirm.

### Deleting a Phone book entry

1. Press **☰** repeatedly until the symbol **☰** is displayed.
2. Scroll though the entries using **△/▽**.
3. Press **C**, DELETE ? will be displayed.
4. Press and hold **C** until the displayed telephone number disappears.

## Deleting all entries in the Phone book


 
1. Press  repeatedly until the symbol  is displayed.
2. Scroll through the entries using  $\Delta/\nabla$ .
3. Press and hold **C** until the display shows DELETE ALL ?.
4. Press and hold **C** again until all the numbers disappear.

## Memory

This telephone has 16 One-Touch memories numbered M1-M16.

Once a number has been stored in a memory location, you only need to press one button to make the call.

### Storing One-Touch Memories


1. Press **CID**/ repeatedly until the symbol  is displayed. Press **STORE**.
2. Enter the telephone number to be stored (up to 22 digits). Press **STORE**.
3. Enter name. Press the corresponding number key one or more times for the first letter. Press **STORE**.
4. Select a One-Touch memory location (M1-M16) by pressing the corresponding button.

*Please note!*

*If you need to insert a pause in the telephone number press **REDIAL**.*

*If you need to change a number, store the new number in the same location as the old one.*

### Dialling using One-Touch Memories

1. Lift the handset (or press ) and wait for a dial tone.
2. Select the required One-Touch memory location (M1-M16) by pressing the corresponding button.

## Caller ID

 
Caller ID allows you to see who is calling before you answer a call or to see who has called in your absence. If the number received is stored in the Phone book its associated name will be displayed instead. The CID memory will store up to 30 names/telephone numbers stored chronologically. The sequence number is shown in the top right-hand side of the display.

When the memory is full, the oldest number will be deleted automatically as the new call is logged. New calls are indicated in plain text in the display.

*Please note!*





*In order for numbers to be shown you must subscribe to the Caller ID service provided by your network operator. Contact your operator for more information.*

### Retrieving and dialling incoming numbers

1. Press **CID** repeatedly until the symbol  is displayed.
2. Scroll through the entries using  $\Delta/\nabla$ .
3. Press **DIAL** to dial the displayed number, or just wait to return to standby mode.

### Caller ID Messages

Apart from showing telephone numbers, the display can also show:

OUT OF AREA	It is an International call or a call from a PBX (no information received).
PRIVATE	The call comes from a blocked number or a PBX.
	New number not previously displayed.
 (double envelope)	Several calls have been received from the same telephone number.
	The call was received using the Call Waiting function
	Message indication.

\* Message indication can be erased manually by pressing **C**.

### Deleting numbers

1. Scroll to the desired entry using  $\Delta/\nabla$ .
2. Press **C**, DELETE ? is displayed, alternatively press and hold **C** until DELETE ALL ? is displayed.
3. Press and hold **C** again until the telephone number disappears.




 
 


### Transferring numbers to the Phone book

1. Scroll to the desired entry using  $\Delta/\nabla$ .
2. Press **STORE**.
3. Press **STORE** again. To enter a name please refer to **Changing phone numbers/names**.

## Alarm settings

When the alarm clock is activated  will be displayed in the standby mode.

Once the alarm clock goes off a tone will be heard for one minute, to switch off the alarm press any button on the telephone.

1. Press and hold  until the alarm setting flashes.
2. Scroll to the required function (off/on/repeat daily) using /. Press **OK**. To cancel the alarm, proceed to point **5**.
3. Select the hour (00-23) using /. Press **OK**.
4. Select the minute/s using /. Press **OK** repeatedly to return to standby mode.
5. To cancel the alarm while it is sounding, press **OK** or lift and replace the handset.

## Technical information

Within the battery compartment located on the underside of the telephone you will find several switches, these switches determine certain technical parameters when connecting the telephone.

*IMPORTANT NOTE: These switches should only be adjusted by qualified personnel.*

### Recall time

The recall button timing can be switched between either 100ms (AU/UK/EU)/300ms (FR)/600ms (NZ), using the **RECALL TIME** switch located on the underside of the telephone (within the battery compartment).

### EARTH/TIME (UK only)

Selection of either earth or timed loop break recall method.

### PULSE/TONE



Select the required dialling type, Tone or Pulse using the **PULSE/TONE** switch located on the underside of the telephone (within the battery compartment).

### Message Waiting indicator

Some PBX systems use a function called Message Waiting.

The switch is located behind the battery cover on the underside of the telephone.



The MW function operates differently depending on the PBX in question. Please contact the system controller for more information. The following four alternatives are available: +, -, ringer indicator () and high DC voltage (HV). When the telephone is used in systems without a telephone exchange () should be selected.

## Connection of additional equipment

On the right side of the telephone there is a socket marked . This is used for connecting additional telephone equipment to the same telephone line, e.g. a wireless telephone, modem, etc.

## Declaration of conformity

Doro hereby declares that this product, Doro AUB 300, conforms with the essential requirements and other relevant regulations contained in the Directive 1999/5/EC, 2002/95/EC. A copy of the manufacturer's declaration is available at [www.doro.com/dofc](http://www.doro.com/dofc)

## Troubleshooting

Check that the telephone cord is undamaged and properly plugged in.

Disconnect any additional equipment, extension cords and other telephones. If the problem is resolved, the fault is with other equipment.

Test the equipment on another working line. If the product works, then the fault is probably with your line. Please inform your local telephone company.

## No number shown in display when ringing

- In order for this feature to function, you must subscribe to the Caller ID service from your network provider.
- If a text message is shown on the display, the call may be an international call (no data received), or from a private or withheld number.
- It may not be possible to receive Caller ID information if the phone is connected to a PBX system.

If the telephone still does not work, contact the place of purchase. Don't forget the receipt or a copy of the invoice.

## UK

If you cannot resolve the fault using the faultfinder section, technical support is available by email on [tech@doro-uk.com](mailto:tech@doro-uk.com) or via a **premium rate telephone number: 0905 895 0854**, calls cost **50 pence per minute** (prices correct at the time of publication). Further contact details are available on our website:

[www.doro-uk.com](http://www.doro-uk.com)

Alternatively you can write to:

Customer Services

Doro UK Ltd

1 High Street

Chalfont St Peter

Buckinghamshire

SL9 9QE

## Guarantee

This product is guaranteed for a period of 10 years from the date of purchase. Proof of purchase is required for any service or support required during the guarantee period.

This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, not reasonably maintained or any other circumstances on the purchaser's part. Furthermore, this guarantee shall not apply to a fault caused by a thunderstorm or any other voltage fluctuations.

This guarantee does not in any way affect your statutory rights. (As a matter of precaution, we recommend disconnecting the telephone during a thunderstorm.)



English

Version 1.0

[www.doro.com](http://www.doro.com)

